

Connect to Sparkfun display as follows:

UMT PCB	SPARKFUN PCB
+5V	VCC
_SS2	SS
MOSI	SDI
SCLK	SCK
GND	GND